


REVEAL MERCHANDISER[®] WITH DOORS QUICK-START INSTALLATION GUIDE

IMPORTANT!


Instructions:

These instructions are not a complete manual. Access the Installation & Operation Manual for additional detail at <https://www.zero-zone.com/ormcd/> or by scanning the QR code.

1. Level, shim, and caulk cases according to the installation and operation manual. Cases must be level, square, and straight with shims placed under all bases. Apply Butyl caulk to only 1 of 2 cases to be joined.
2. Slide cases together. Only push on the sheet metal of the bottom foamed panel. Be careful to not damage the bases.
3. To access joining holes, remove shelves, bottom wire racks, deck pans, return air grills, and cover panels in the false ceiling from the right end of the left case, as shown in the figure.
4. Align cases front and rear, and make sure cases are within 1/4" from one another.
5. Install and hand tighten the joining bolts and nuts. Push cases together firmly and then tighten the joining bolts. **Do not attempt to pull the cases together using the joining bolts.**
6. Check that the case is level by setting a 4' level against the end frame or intermediate standard.
7. Check case squareness. Measure diagonally from the top right corner of the case to the bottom left corner, then measure between the opposite corners. The measurements should be within 1/8" of each other.
8. After leveling the case, add 3/8" of shims under the front bases to offset the forward lean of a loaded case.
9. Apply NSF-approved caulk to the interior seams between the cases and between cases and end panels to comply with NSF certification requirements.
10. Install the drain tee, trap, and line to the outlet pipe under the case. The drain trap must be level, and the drain line must be pitched away from the case for proper drainage. Refer to the Hybrid™ Installation & Operation Manual if your case uses a condensate pump and evaporation pan.
11. Refrigeration connections typically terminate inside the case. Other exit options may have been ordered, such as top or out back.
12. Access the bottom electrical enclosure (behind the bumper in the figure) for electrical components and LED power supplies. Top electrical connection options may have been ordered.
13. After case is wired and completely installed, install the lower bumper trim.
14. Install front and end kickplates with splices using provided fasteners and Tinnerman clips.
15. Install the top trim splice to the top of the case. Install kickplate splice to the bottom of the case.
16. Prime the drain trap with water after the case is powered.

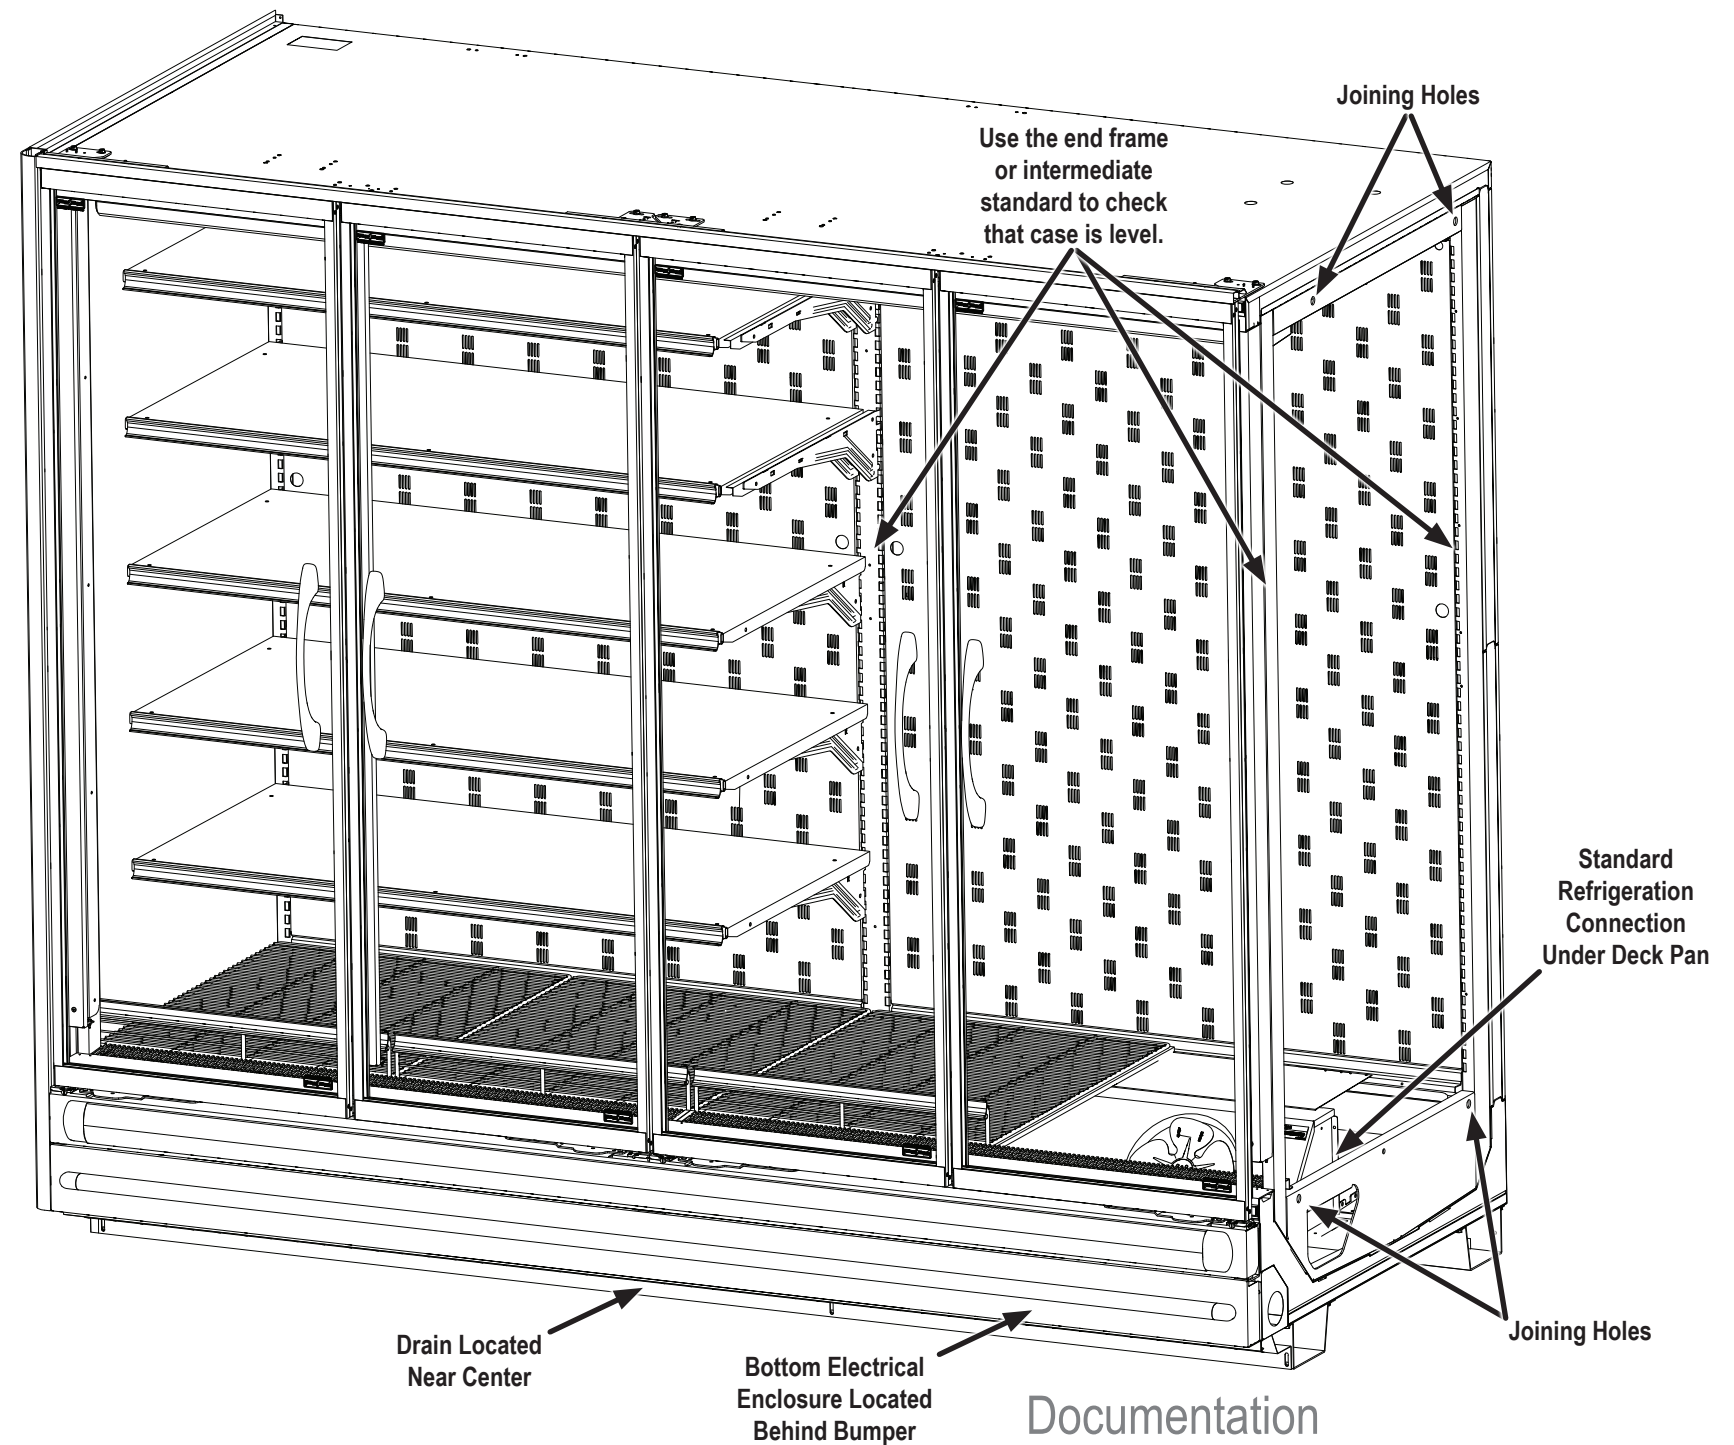

Documentation

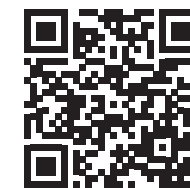

Manuals, spec sheets, and instructions are available by scanning the QR Code here or on the interior case ceiling near the serial tag. Scan the QR Code with the camera on your mobile device or with a QR Code reader app. Or, use this URL to access the documentation: <https://www.zero-zone.com/ormcd/>.

Reveal Merchandiser[®] is a registered trademark of Zero Zone, Inc. in the United States.



ZERO ZONE, INC. • 800-247-4496 • ZERO-ZONE.COM
© 2024 Zero Zone, Inc. All Rights Reserved. • MAR 2024

66-0144 REV B